



Southeast Aerospace, Inc
1399 General Aviation Dr
Melbourne, Florida 32935 USA
sales@seaerospace.com
Tel: 321-255-9877
Fax: 321-255-9608
www.seaerospace.com

Beechcraft 99 Capabilities List

Part Number	Model	Description	Capability
011-00280-10	GNS-430	GPS Nav/Comm	SEA Test, Spares
011-00401-10	GMA-340	Audio Panel	SEA Repair, Spares, & Exchange
011-00455-00	GTX-330	Transponder	SEA Repair, Spares, & Exchange
011-00490-00	GTX-327	Transponder	SEA Repair, Spares, & Exchange
011-00550-10	GNS-530	GPS Nav/Comm	SEA Repair, Spares, & Exchange
011-01060-00	GNS-430W	GPS Nav/Comm	SEA Test, Spares
011-01060-40	GNS-430W	GPS Nav/Comm	SEA Test, Spares
011-01061-40	GNS-530W	GPS Nav/Comm	SEA Repair, Spares, & Exchange
011-01061-40	GNS-530W	GPS Nav/Comm	SEA Repair, Spares, & Exchange
060-0015-00	KG-102A	Directional Gyro	SEA Repair, Spares, & Exchange
066-01156-0101	KT-76C	Transponder	SEA Repair, Spares, & Exchange
066-03064-0003	KEA-130	Encoding Altimeter	SEA Repair, Spares, & Exchange
066-1048-00	KRA-405	Radar Altimeter	SEA Repair, Spares, & Exchange
066-1048-02	KRA-405	Radar Altimeter	SEA Repair, Spares, & Exchange
066-1055-03	KMA-24	Audio Panel	SEA Repair, Spares, & Exchange
066-1062-00	KT-76A	Transponder	SEA Repair, Spares, & Exchange
066-1072-00	KR-87	ADF Receiver	SEA Repair, Spares, & Exchange
066-1072-04	KR-87	ADF REceiver	SEA Repair, Spares, & Exchange
066-3038-00	KI-229	RMI	SEA Repair, Spares, & Exchange
066-3046-01	KI-525A	H.S.I.	SEA Repair, Spares, & Exchange
066-3046-07	KI-525A	H.S.I.	SEA Repair, Spares, & Exchange
066-3056-00	KI-208	VOR/ILS Indicator	SEA Repair, Spares, & Exchange
066-3056-01	KI-209	VOR/ILS/GS Indicator	SEA Repair, Spares, & Exchange
066-3064-03	KEA-130	Encoding Altimeter	SEA Repair, Spares, & Exchange
069-1024-39	KX-155	Nav/Comm	SEA Repair, Spares, & Exchange
069-1024-43	KX-155	Nav/Comm	SEA Repair, Spares, & Exchange
071-1234-00	KA-44B	ADF Antenna	SEA Repair, Spares, & Exchange

Part Number	Model	Description	Capability
1U367-301-1		Attitude Gyro	SEA Spares & Exchange
2587193-3	C-14	Directional Gyro	SEA Repair, Spares, & Exchange
4000946-5201	IN-152A	Radar Indicator	SEA Repair, Spares, & Exchange
4020501-300	GH-14A	Attitude Gyro	SEA Spares & Exchange
504-0006-906	300-3BCF	Attitude Gyro	SEA Spares & Exchange
504-0010-909	500DCF(28)	Attitude Gyro	SEA Spares & Exchange
504-0022-901	251ECFR	Attitude Gyro	SEA Spares & Exchange
504-0022-902	251ECRB	Attitude Gyro	SEA Spares & Exchange
504-0038-902	510-38B	Attitude Gyro	SEA Spares & Exchange
505-0002-904	200DC28	Directional Gyro	SEA Spares & Exchange
505-0023-908	210-5AL	Directional Gyro	SEA Spares & Exchange
519-28702-005	28702-005	Encoding Altimeter	SEA Spares & Exchange
520-7100-001	NC-7100	RMI Converter	SEA Spares & Exchange
520-7137-014		RMI	SEA Spares & Exchange
522-2638-006	331A-3G	H.S.I.	SEA Repair, Spares, & Exchange
5934A-1A.106		Altimeter	SEA Spares & Exchange
622-4938-001	RMI-30	RMI	SEA Repair, Spares, & Exchange
7002493-908	RD-450	H.S.I.	SEA Spares & Exchange
7040C.5		Vertical Speed Indicator	SEA Repair, Spares, & Exchange
7130C.44		Vertical Speed Indicator	SEA Repair, Spares, & Exchange
93A151-20	A151B	CVR Control	SEA Repair, Spares, & Exchange
93A151-30	A151B	CVR Control	SEA Repair, Spares, & Exchange
C2400		Magnetic Compass	SEA Spares
SLZ9066		IVSI	SEA Spares & Exchange