



Southeast Aerospace, Inc
1399 General Aviation Dr
Melbourne, Florida 32935 USA
sales@seaerospace.com
Tel: 321-255-9877
Fax: 321-255-9608
www.seaerospace.com

Beechcraft 1900 Capabilities List

Part Number	Model	Description	Capability
011-00280-10	GNS-430	GPS/Nav/Comm	SEA Repair, Spares, & Exchange
011-01060-00	GNS-430W	GPS/Nav/Comm	SEA Repair, Spares, & Exchange
011-01060-40	GNS-430W	GPS/Nav/Comm	SEA Repair, Spares, & Exchange
065-0053-00	KAS-297A	Altitude Preselector	SEA Repair, Spares, & Exchange
065-0053-08	KAS-297A	Altitude Preselector	SEA Repair, Spares, & Exchange
066-01196-0101	KGP-560	EGPWS	SEA Spares & Exchange
066-01196-0203	KGP-560	EGPWS	SEA Spares & Exchange
066-01196-0205	KGP-560	EGPWS	SEA Spares & Exchange
066-03062-0000	KEA-346	Encoding Altimeter	SEA Repair, Spares, & Exchange
066-03062-0008	KEA-346	Encoding Altimeter	SEA Repair, Spares, & Exchange
066-3062-00	KEA-346	Encoding Altimeter	SEA Repair, Spares, & Exchange
066-3062-08	KEA-346	Encoding Altimeter	SEA Repair, Spares, & Exchange
2587193-43	C-14A	Directional Gyro	SEA Repair, Spares, & Exchange
2593379-001	CS-412	Remote Compensator	SEA Repair, Spares, & Exchange
2593379-1	CS-412	Remote Compensator	SEA Repair, Spares, & Exchange
2594484	FX220	Flux Valve	SEA Repair, Spares, & Exchange
4001846-3201	IN-232A	Radar Indicator	SEA Repair, Spares, & Exchange
501-1228-04	PS-835D	Emergency Power Supply	SEA Repair, Spares, & Exchange
501-1296-04	AI-804F	Attitude Indicator	SEA Spares & Exchange
504-0042-903	510-32B	Attitude Gyri	SEA Spares & Exchange
522-1400-000	341C-1	RMI Servo Amp	SEA Repair, Spares, & Exchange
522-2638-006	331A-3G	H.S.I.	SEA Repair, Spares, & Exchange
522-2638-008	331A-3G	H S I	SEA Repair, Spares, & Exchange
522-3241-000	332E - 4	Directional Gyro	SEA Repair, Spares, & Exchange
622-1270-001	TDR-90	Transponder	SEA Repair, Spares, & Exchange
622-2362-001	ADF-60A	ADF Receiver	SEA Repair, Spares, & Exchange
622-2363-001	ANT-60A	ADF Antenna	SEA Repair, Spares, & Exchange

Part Number	Model	Description	Capability
622-2501-001	ANT-312	Radar Antenna	SEA Repair, Spares, & Exchange
622-2506-003	RMI-36	RMI	SEA Repair, Spares, & Exchange
622-2506-014	RMI-36	RMI	SEA Repair, Spares, & Exchange
622-2855-001	ALT-55B	Rad Alt R/T	SEA Repair, Spares, & Exchange
622-2855-011	ALT-55B	Rad Alt R/T	SEA Repair, Spares, & Exchange
622-2937-001	ALI-55	Rad Alt Indicator	SEA Repair, Spares, & Exchange
622-3710-001	ANT-60B	Dual ADF Antenna	SEA Repair, Spares, & Exchange
622-4160-008	DRI-55	Rad Alt Indicator	SEA Repair, Spares, & Exchange
622-4160-018	DRI-55	Rad Alt Indicator	SEA Repair, Spares, & Exchange
622-4331-001	IND-300	Radar Indicator	SEA Repair, Spares, & Exchange
622-4565-001	332D-11T	Vertical Gyro	SEA Repair, Spares, & Exchange
622-4938-001	RMI-30	RMI	SEA Repair, Spares, & Exchange
622-5812-001	FDU-70	Flux Detector Unit	SEA Repair, Spares, & Exchange
622-5941-001	IND-270	Radar Indicator	SEA Repair, Spares, & Exchange
622-6136-002	DGS-65	Directional Gyro	SEA Repair, Spares, & Exchange
622-6137-001	VIR-32	Nav Receiver	SEA Repair, Spares, & Exchange
622-6137-201	VIR-32	Nav Receiver	SEA Repair, Spares, & Exchange
622-6152-001	VHF-22A	VHF Comm	SEA Repair, Spares, & Exchange
622-6152-011	VHF-22A	VHF Comm	SEA Repair, Spares, & Exchange
622-6197-001	EFD-74	EHSI	SEA Spares & Exchange
622-6198-003	HPU-74	Processor	SEA Spares & Exchange
622-6200-002	HCP-74	Control Panel	SEA Spares & Exchange
622-6263-001	DME-42	DME	SEA Repair, Spares, & Exchange
622-6263-003	DME-42	DME	SEA Repair, Spares, & Exchange
622-6520-008	CTL-22	Comm Control	SEA Repair, Spares, & Exchange
622-6521-016	CTL-32	Nav Control	SEA Repair, Spares, & Exchange
622-6522-008	CTL-62	ADF Control	SEA Repair, Spares, & Exchange
622-6522-016	CTL-62	ADF Control	SEA Repair, Spares, & Exchange
622-6523-008	CTL-92	Transponder Control	SEA Repair, Spares, & Exchange
622-6523-208	CTL-92	Transponder Control	SEA Repair, Spares, & Exchange
622-6524-003	IND-42A	DME Indicator	SEA Repair, Spares, & Exchange
622-6590-001	CAD-62	Control Adapter	SEA Repair, Spares, & Exchange
622-6590-002	CAD-62	Control Adapter	SEA Repair, Spares, & Exchange

Part Number	Model	Description	Capability
622-7337-001	WXT-250B	Radar R/T	SEA Repair, Spares, & Exchange
622-9627-005	FYD-65	Autopilot Computer	SEA Spares & Exchange
622-9627-205	FYD-65	Autopilot Computer	SEA Spares & Exchange
787-6173-016	ADI-84	Flight Director Indicator	SEA Spares & Exchange
93A100-83	A100A	CVR	SEA Spares & Exchange
93A151-30	A151B	CVR Control	SEA Repair, Spares, & Exchange
93A152-30	A152B	CVR Control	SEA Repair, Spares, & Exchange
PC-250	PC250	Static Inverter	SEA Repair, Spares, & Exchange
S100-0080-00	A100S	CVR	SEA Repair, Spares, & Exchange
SPC-10	SPC10	Static Inverter	SEA Spares & Exchange
SPC-38	SPC38	Static Inverter	SEA Spares & Exchange
ST3400-000	ST-3400	TAWS Indicator	SEA Spares & Exchange