



Southeast Aerospace, Inc
1399 General Aviation Dr
Melbourne, Florida 32935 USA
sales@seaerospace.com
Tel: 321-255-9877
Fax: 321-255-9608
www.seaerospace.com

SEA Caravan Capabilities List

| Part Number | Model | Description | Capability |
|--------------|------------|---------------------------|----------------------------|
| 010-00152-11 | GMA-340 | Audio Panel | SEA Test, Spares |
| 011-00280-10 | GNS-430 | GPS/Nav/Comm | SEA Test, Spares |
| 011-00401-00 | GMA-340 | Audio Panel | SEA Test, Spares |
| 011-00401-10 | GMA-340 | Audio Panel | SEA Test, Spares |
| 011-00455-00 | GTX-330 | Transponder | SEA Test, Spares, Exchange |
| 011-00490-00 | GTX-327 | Transponder | SEA Test, Spares, Exchange |
| 011-00550-10 | GNS-530 | GPS/Nav/Comm | SEA Test, Spares, Exchange |
| 011-00809-00 | GMA-1347 | Digital Audio Panel | SEA Spares, Exchange |
| 011-00831-00 | GEA-71 | Engine/Airframe Unit | SEA Spares, Exchange |
| 011-00878-00 | GSA-81 | Pitch/Trim Servo | SEA Spares, Exchange |
| 011-00878-10 | GSA-81 | Pitch/Trim Servo | SEA Spares, Exchange |
| 011-00878-20 | GSA-81 | Pitch/Trim Servo | SEA Spares, Exchange |
| 011-00882-10 | GDC-74 | Air Data Computer | SEA Spares, Exchange |
| 011-00882-11 | GDC-74H | HIRF Air Data Computer | SEA Spares, Exchange |
| 011-00916-10 | GDU -1040A | Display Unit | SEA Spares, Exchange |
| 011-00972-00 | GDU-1040 | Display Unit | SEA Spares, Exchange |
| 011-00972-03 | GDU-1040 | Display Unit | SEA Spares, Exchange |
| 011-00972-10 | GDU-1040 | Display Unit | SEA Spares, Exchange |
| 011-01020-00 | GMC-710 | Mode Controller | SEA Spares, Exchange |
| 011-01020-10 | GMC-710 | Mode Controller | SEA Spares, Exchange |
| 011-01060-00 | GNS-430W | GPS/Nav/Comm | SEA Test, Spares |
| 011-01060-40 | GNS-430W | GPS/Nav/Comm | SEA Test, Spares |
| 011-01064-00 | GNS-530W | GPS/Nav/Comm | SEA Test, Spares, Exchange |
| 011-01064-40 | GNS-530W | GPS/Nav/Comm | SEA Test, Spares, Exchange |
| 011-01079-00 | GDU-1043 | Multi-Function/Display | SEA Spares, Exchange |
| 011-01080-00 | GDU-1042 | Multi-Function/Display | SEA Spares, Exchange |
| 011-01105-00 | GIA-63W | Intergrated Avionics Unit | SEA Spares, Exchange |

| Part Number | Model | Description | Capability |
|----------------|-----------|------------------------------|------------------------------|
| 011-01105-01 | GIA-63W | Intergrated Avionics Unit | SEA Spares, Exchange |
| 011-01105-20 | GIA-63W | Intergrated Avionics Unit | SEA Spares, Exchange |
| 011-01105-40 | GIA-63W | Intergrated Avionics Unit | SEA Spares, Exchange |
| 011-01274-00 | GDU-1044B | Display Unit | SEA Spares, Exchange |
| 011-01793-00 | GMA-36 | Remote Mount Audio Processor | SEA Spares, Exchange |
| 011-03470-00 | GDU-1050 | Multi-Function/Display | SEA Spares, Exchange |
| 013-00049-00 | GI-106A | VOR/ILS/GS Indicator | SEA Spares, Exchange |
| 013-00049-10 | GI-106A | VOR/ILS/GS Indicator | SEA Spares, Exchange |
| 060-0015-00 | KG-102A | Directional Gyro | SEA Repair, Spares, Exchange |
| 060-0017-00 | KI-256 | Flight Director Indicator | SEA Repair, Spares, Exchange |
| 060-0020-01 | KG-258 | Horizon Gyro | SEA Repair, Spares, Exchange |
| 060-0024-00 | KRG-331 | Yaw Rate Gyro | SEA Spares, Exchange |
| 060-0026-00 | KVG-350 | Vertical Gyro | SEA Spares, Exchange |
| 064-1015-00 | KTR-953 | HF Receiver | SEA Repair, Spares, Exchange |
| 064-1015-01 | KTR-953 | HF Receiver | SEA Repair, Spares, Exchange |
| 064-1016-00 | KCU-951 | HF Control | SEA Repair, Spares, Exchange |
| 064-1017-00 | KAC-952 | HF Coupler | SEA Repair, Spares, Exchange |
| 064-1019-00 | KY-196 | VHF Comm | SEA Repair, Spares, Exchange |
| 065-00178-2200 | KS-270C | Pitch Servo | SEA Repair, Spares, Exchange |
| 065-00179-0100 | KS-271C | Primary Servo | SEA Repair, Spares, Exchange |
| 065-00179-0500 | KS-271C | Pitch Servo | SEA Repair, Spares, Exchange |
| 065-00180-0800 | KS-272C | Trim Servo | SEA Repair, Spares, Exchange |
| 065-00183-0501 | KC-225 | Autopilot Computer | SEA Spares, Exchange |
| 065-0032-01 | KA-285 | Annunciator Panel | SEA Spares, Exchange |
| 065-0042-03 | KC-192 | Autopilot Computer | SEA Spares, Exchange |
| 065-0042-15 | KC-192 | Autopilot Computer | SEA Spares, Exchange |
| 065-0060-01 | KS-271A | Roll/Yaw Servo | SEA Repair, Spares, Exchange |
| 065-0060-01 | KAS-297B | Altitude Selector | SEA Repair, Spares, Exchange |
| 066-01141-5101 | KT-71 | Transponder | SEA Repair, Spares, Exchange |
| 066-01148-0101 | KLN-89B | GPS Receiver | SEA Repair, Spares |
| 066-01148-0102 | KLN-89B | GPS Receiver | SEA Repair, Spares |
| 066-01152-0101 | KTA-810 | Traffic Awareness Unit | SEA Spares, Exchange |
| 066-01153-0101 | KRA-405B | Rad Alt R/T | SEA Repair, Spares, Exchange |

| Part Number | Model | Description | Capability |
|----------------|----------|-----------------------|------------------------------|
| 066-01156-0101 | KT-76C | Transponder | SEA Repair, Spares, Exchange |
| 066-01175-2101 | KMH-820 | Multi-Hazard Unit | SEA Spares, Exchange |
| 066-01175-2102 | KMH-820 | Multi-Hazard Unit | SEA Spares, Exchange |
| 066-01179-0101 | KI-825 | EHSI | SEA Spares |
| 066-01179-0103 | KI-825 | EHSI | SEA Spares |
| 066-01179-0104 | KI-825 | EHSI | SEA Spares |
| 066-01196-0101 | KGP-560 | EGPWS | SEA Spares |
| 066-01196-0203 | KGP-560 | EGPWS | SEA Spares |
| 066-01196-0205 | KGP-560 | EGPWS | SEA Spares |
| 066-03064-0002 | KEA-130 | Encoding Altimeter | SEA Repair, Spares, Exchange |
| 066-03064-0003 | KEA-130A | Encoding Altimeter | SEA Repair, Spares, Exchange |
| 066-04031-1121 | KLN-90B | GPS Receiver | SEA Repair, Spares |
| 066-04031-1122 | KLN-90B | GPS Receiver | SEA Repair, Spares |
| 066-04035-0101 | KMD-540 | Multifunction Display | SEA Repair, Spares |
| 066-04035-1101 | KMD-540 | Multifunction Display | SEA Repair, Spares |
| 066-1021-01 | KR-21 | Marker Beacon | SEA Repair, Spares |
| 066-1053-00 | KT-79 | Transponder | SEA Repair, Spares |
| 066-1055-02 | KMA-24 | Audio Panel | SEA Repair, Spares |
| 066-1055-03 | KMA-24 | Audio Panel | SEA Repair, Spares |
| 066-1055-70 | KMA-24H | Audio Panel | SEA Repair, Spares |
| 066-1055-71 | KMA-24H | Audio Panel | SEA Repair, Spares |
| 066-1061-03 | KRA-10A | Radio Altimeter | SEA Repair, Spares |
| 066-1062-00 | KT-76A | Transponder | SEA Repair, Spares |
| 066-1067-00 | KN-53 | Nav Receiver | SEA Repair, Spares |
| 066-1069-00 | KDI-572 | DME Indicator | SEA Repair, Spares |
| 066-1070-00 | KN-63 | DME | SEA Repair, Spares, Exchange |
| 066-1070-01 | KN-63 | DME | SEA Repair, Spares, Exchange |
| 066-1072-00 | KR-87 | ADF Receiver | SEA Repair, Spares, Exchange |
| 066-1072-04 | KR-87 | ADF Receiver | SEA Repair, Spares, Exchange |
| 066-1072-14 | KR-87 | ADF Receiver | SEA Repair, Spares, Exchange |
| 066-1088-00 | KN-64 | DME | SEA Repair, Spares, Exchange |
| 066-3034-02 | KI-204 | VOR/ILS/GS Indicator | SEA Repair, Spares |
| 066-3034-04 | KI-206 | VOR/ILS/GS Indicator | SEA Repair, Spares |

| Part Number | Model | Description | Capability |
|----------------|----------|----------------------|------------------------------|
| 066-3046-01 | KI-525A | H.S.I. | SEA Repair, Spares, Exchange |
| 066-3046-07 | KI-525A | H.S.I. | SEA Repair, Spares, Exchange |
| 066-3054-01 | KI-250 | Rad Alt Indicator | SEA Repair, Spares, Exchange |
| 066-3056-11 | KI-209A | VOR/ILS/GS Indicator | SEA Repair, Spares, Exchange |
| 066-3060-00 | KNI-582 | Nav Indicator | SEA Repair, Spares, Exchange |
| 066-3063-00 | KI-227 | ADF Indicator | SEA Repair, Spares |
| 066-3064-02 | KEA-130 | Encoding Altimeter | SEA Repair, Spares, Exchange |
| 066-3064-03 | KEA-130A | Encoding Altimeter | SEA Repair, Spares, Exchange |
| 066-3084-32 | IN-182A | Radar Indicator | SEA Repair, Spares, Exchange |
| 066-3114-00 | IN-812A | Radar Indicator | SEA Repair, Spares, Exchange |
| 066-4010-00 | KNS-81 | Nav System | SEA Repair, Spares |
| 066-4010-10 | KNS-81 | Nav System | SEA Repair, Spares |
| 069-01032-0101 | KX-155A | Nav/Comm w/ GS | SEA Repair, Spares |